


SHURE[®]

LEGENDARY
PERFORMANCE™

MODEL UA845
USER GUIDE

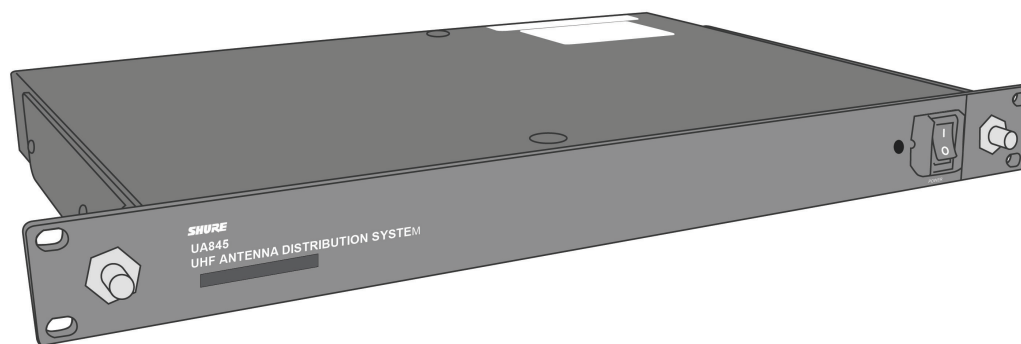

**ANTENNA DISTRIBUTION SYSTEM
USER'S GUIDE**

**RÉPARTITEUR D'ANTENNE
LE GUIDE DE L'UTILISATEUR**

**ANTENNENVERTEILERSYSTEM
BEDIENUNGSANLEITUNG**

**SISTEMA DE DISTRIBUCIÓN DE ANTENAS
GUÍA DEL USUARIO**

**SISTEMA DI DISTRIBUZIONE AD ANTENNE
GUIDA DELL'UTENTE**



POWERING ON/POWERING OFF THE UA845



Last powered on

To avoid damaging internal components, the UA845 amplifier should be the **last** component in your system to be powered **on**.



First powered off

To avoid damaging internal components, the UA845 amplifier should be the **first** component in your system to be powered **off**.

CONNECTING ANTENNA CABLES

Accidentally connecting the center cable pin (power supply) to the cable housing (ground) may cause internal component damage. **Use caution when installing cables.**

MISE SOUS TENSION/MISE HORS TENSION DU UA845

Pour éviter d'endommager les composants internes, l'amplificateur UA845 doit être le **dernier** composant du système à être mis **sous tension**.

Pour éviter d'endommager les composants internes, l'amplificateur UA845 doit être le **premier** composant du système à être mis **hors tension**.

RACCORDEMENT DES CÂBLES D'ANTENNE

Le raccordement accidentel de la broche centrale du câble (alimentation) à la gaine du câble (masse) peut endommager les composants internes. **Installer les câbles avec précaution.**

ENCENDIDO Y APAGADO DEL UA845

Para evitar dañar los componentes internos, el amplificador UA845 debe ser el **último** componente que **se enciende** en su sistema.

Para evitar dañar los componentes internos, el amplificador UA845 debe ser el **primer** componente que **se apaga** en su sistema.

CONEXION DE CABLES DE ANTENA

La conexión accidental de la clavija central del cable (fuente de alimentación) a la caja del cable (tierra) puede causar daño a los componentes internos. **Tenga cuidado al instalar los cables.**

AN-/AUSSCHALTEN DES UA845

Der Verstärker UA845 sollte als **letzte** Komponente Ihres System **angeschaltet** werden, um die Beschädigung interner Komponenten zu vermeiden.

Der Verstärker UA845 sollte als **erste** Komponente Ihres System **ausgeschaltet** werden, um die Beschädigung interner Komponenten zu vermeiden.

ANSCHLIESSEN DER ANTENNENKABEL

Wenn der mittlere Kabelstift (Stromversorgung) versehentlich mit dem Kabelgehäuse (Masse) in Kontakt kommt, kann dies zur Beschädigung interner Komponenten führen. **Beim Anschließen der Kabel vorsichtig vorgehen.**

ACCENSIONE/SPEGNIMENTO DEL MODELLO UA845


Per prevenire danni ai componenti interni, l'amplificatore UA845 va **acceso** per **ultimo**.

Per prevenire danni ai componenti interni, l'amplificatore UA845 va **spento** per **primo**.

COLLEGAMENTO DEI CAVI DELL'ANTENNA

Il collegamento accidentale del piedino del cavo centrale (alimentazione) all'alloggiamento del cavo (massa) può provocare danni ai componenti interni. **Fate attenzione durante l'installazione dei cavi.**

! IMPORTANT SAFETY INSTRUCTIONS !

1. READ these instructions.
2. KEEP these instructions.
3. HEED all warnings.
4. FOLLOW all instructions.
5. DO NOT use this apparatus near water.
6. CLEAN ONLY with dry cloth.
7. DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. DO NOT defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. PROTECT the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. ONLY USE attachments/accessories specified by the manufacturer.
12.  USE only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. UNPLUG this apparatus during lightning storms or when unused for long periods of time.
14. REFER all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. DO NOT expose the apparatus to dripping and splashing. DO NOT put objects filled with liquids, such as vases, on the apparatus.
16. The MAINS plug or an appliance coupler shall remain readily operable.
17. The airborne noise of the apparatus does not exceed 70dB (A).
18. Apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.
19. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
20. Do not attempt to modify this product. Doing so could result in personal injury and/or product failure.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

WARNING: Voltages in this equipment are hazardous to life. No user-serviceable parts inside. Refer all servicing to qualified service personnel. The safety certifications do not apply when the operating voltage is changed from the factory setting.

WARNING: This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

MODEL UA845 ANTENNA DISTRIBUTION SYSTEM

The Shure Model UA845 is an amplified, UHF Antenna Distribution System that expands a wireless microphone system by splitting one pair of antennas to multiple Shure UR4 or Shure ULX4 wireless receivers. It also amplifies RF signals to compensate for insertion loss due to splitting signal power to multiple output connectors. Each UA845 allows up to four receivers to use the same antennas. CASCADE connectors allows connections to a fifth receiver or a second UA845. There are also power connectors for powering Shure UHF Wireless systems. Each system contains the following items:


- UA845 Antenna Distribution System
- Rack-mounting hardware
- Surface-mounting hardware
- Front-mounting antenna hardware
- 18-in. Power OUTPUT Cord
- Power Cord
- Antenna cables for receiver connections

The Shure Model UA845 ensures maximum sensitivity and signal processing capability, providing the widest radio range possible for the largest number of wireless receivers. To get the most from this system, follow these guidelines:


- When using long runs of cable for remote-mounted antennas, use the UA830 In-Line RF Amplifier and the Shure Model UA825 or UA850 Remote Antenna Extension cables (RG-8/X or equivalent), which have low loss at UHF operating frequencies
- Locate multiple transmitters more than 3 m [10 ft] from receiving antennas

CONTROLS AND CONNECTORS

FRONT PANEL

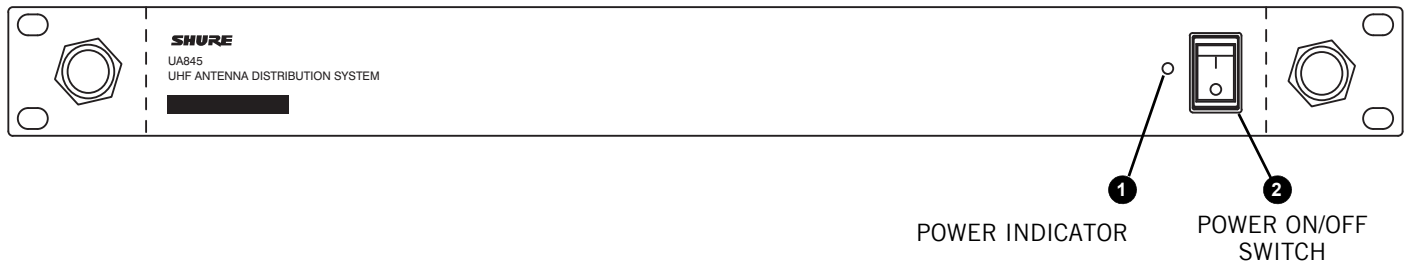

BACK PANEL

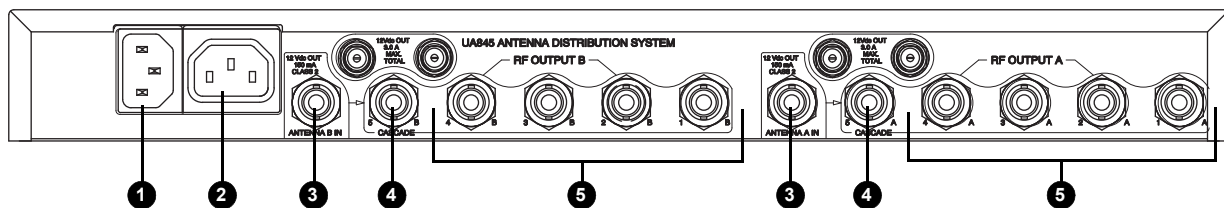


- 1 AC Power INPUT Connector.
- 2 AC Power OUTPUT Connector. Each UA845 has a Power OUTPUT connector for daisy-chaining up to five (5) Shure Model UR4 UHF Diversity Single or Dual Receivers to a single power source.
NOTE: This connector does not work for Shure ULX4 Receivers.
- 3 ANTENNA IN Ports, Channel A & B. BNC-type connectors for antennas.
- 4 RF CASCADE Connectors (Output connector 5), Channel A & B. BNC-type connectors for adding a fifth receiver, or additional UA845's, permitting more wireless receivers to be connected.
- 5 RF OUTPUT Connectors, Channel A & B. BNC-type connectors for up to four wireless receivers.

SYSTEM FEATURES

- **Expandability.** The UA845 UHF Antenna Distribution System is designed for large UHF wireless systems. Each unit allows up to four wireless receivers to use the same two antennas, and the CASCADE ports allow connection to a fifth receiver or a second UA845.
- **Compatibility.** The UA845 is compatible with all Shure wireless microphone receivers operating within a compatible frequency range (see *UHF Carrier Frequency Ranges* in the Specifications section).
- **CASCADE Ports.** Two 50 Ω , BNC-type antenna CASCADE ports allow an additional UA845 unit or a fifth wireless receiver. A large wireless system can be run off of a single pair of antennas.
- **Power OUTPUT and OUT Connectors.** Up to five (5) UR4 receivers can be daisy-chained and powered from a single source via the Power OUTPUT connectors.
- **Low Noise and Intermodulation Distortion.** The UA845 maintains clean signals with minimal distortion.
- **Insertion Loss Compensation.** Whenever a signal is split to multiple output ports, there is a loss in signal strength. The UA845 amplifies signals to compensate, ensuring a strong signal to the receivers.
- **Front-Mounted Antennas.** The UA845 comes with hardware to front-mount the antennas, if desired.

SYSTEM INSTALLATION

INSTALLING FRONT-MOUNTED ANTENNAS

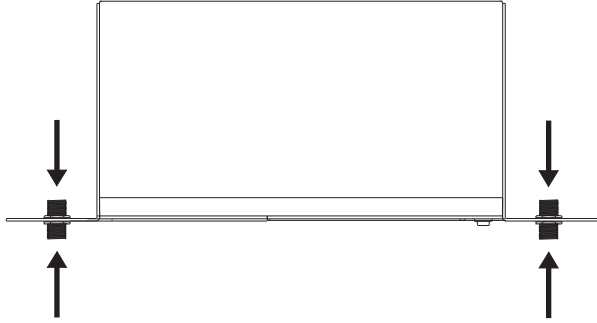

The UA845 comes equipped for front-mounted antennas. Front-mounting improves RF performance of the system by moving the antennas to the front of the rack. When a unit is located in a rack, antennas should be either front- or remote-mounted.

1. Insert the bulkhead adapters through the holes in each bracket, and secure them from each side, using the supplied hardware.
2. Connect the supplied antenna cables to the receiver antenna inputs and adapters.
3. Install the antennas onto the bulkhead adapters protruding through the front panel.

NOTE: For the best results, point the antennas up and away from each other at 45° angles from vertical. This ensures the best possible reception and greatly reduces the possibility of signal dropout. Always perform a walk-through test of the system in the performing area before using a wireless system.

CONNECTING RECEIVERS


SINGLE UA845 SETUP

1. Using low-loss, 50 Ω coaxial cables (RG-58 or equivalent), connect the right and left (Channels 1 through 4, A and B) RF OUTPUT ports on the UA845 to the corresponding left and right antenna inputs on each receiver. Use the CASCADE ports to connect a fifth receiver.
2. Using the supplied power cable, connect the UA845 to a power outlet.
3. To daisy-chain UR4 Receivers together with Power OUTPUT cables, connect the Power OUTPUT connector of the UA845 to the Power INPUT connector of one receiver. Connect the remaining receivers similarly. Connect the POWER INPUT of the unit to a power supply.

NOTE: No more than five (5) Shure UHF receivers should be powered through a daisy-chain from a single UA845.

INSTALLING REMOTE ANTENNAS

Remote-mounted antennas have the advantage of being free from the unit and closer to the transmitters. They can be placed anywhere within the recommended cable length, creating a much wider radio reception range and further reducing the possibility of signal dropout. When remote-mounted antennas are desirable, please ask your Shure dealer for information on the UA830 In-Line RF Amplifier. Cables are available in UA825 (7.5 m [25 ft]) and UA850 (15 m [50 ft]) versions.

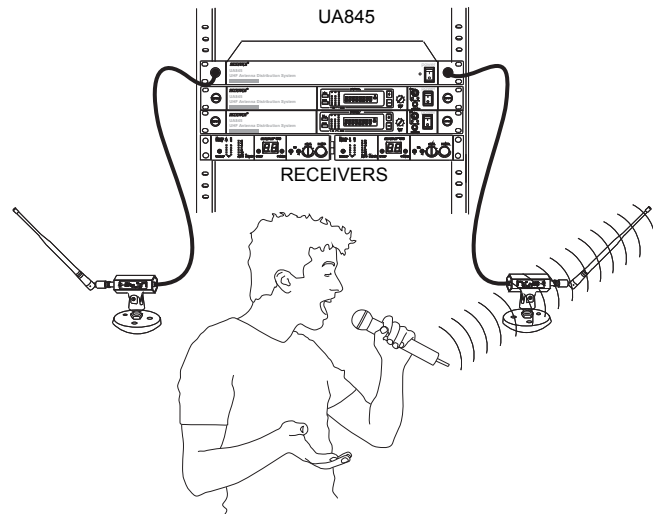


MULTIPLE UA845 SETUP


1. Connect the CASCADE ports (connector 5) for RF OUTPUT Channels A and B of one UA845 to the ANTENNA INPUT, channels A and B, of a UR4 receiver, or a second UA845.
2. If desired, connect additional units in the same manner.
3. To daisy-chain UR4 Receivers together with Power OUTPUT cables, connect the Power OUTPUT connector of the UA845 to the Power INPUT connector of one receiver. Connect the remaining receivers similarly. Connect the POWER INPUT of the unit to an AC power supply.

WARNING: When adding additional UA845's to a system, each UA845 should be connected to a separate power supply. **No more than five (5) receivers can be powered from a single UA845.**

Daisy-chaining multiple UA845's through the Power OUTPUT ports will overload a single power supply, possibly causing damage to the equipment.

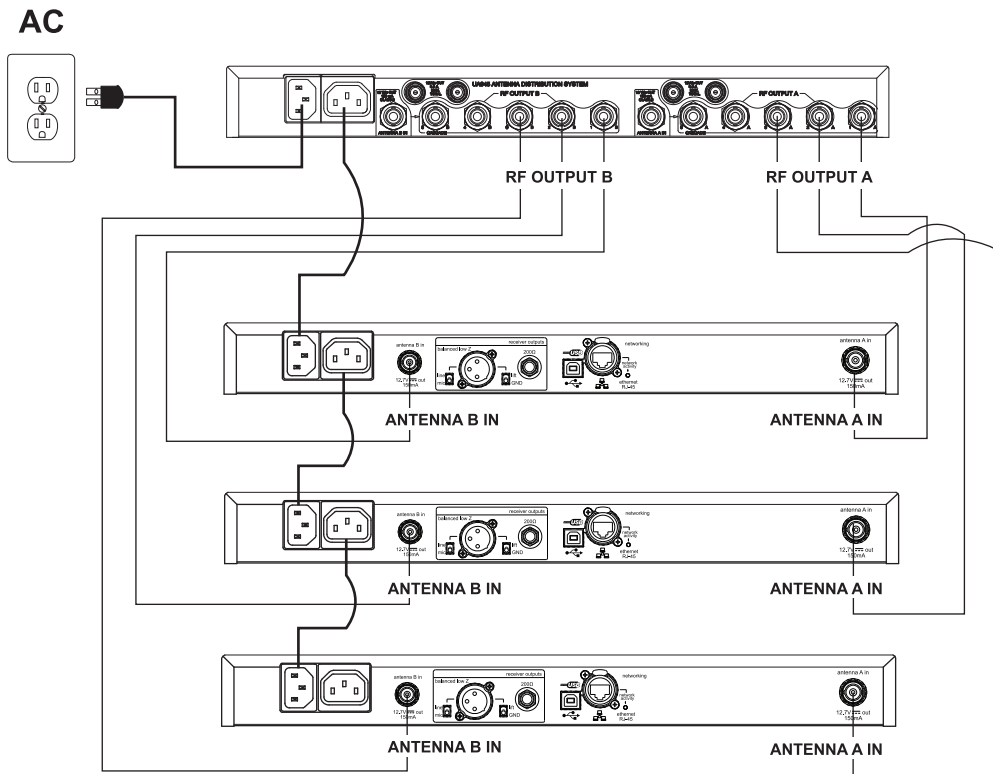

SINGLE UA845 SETUP

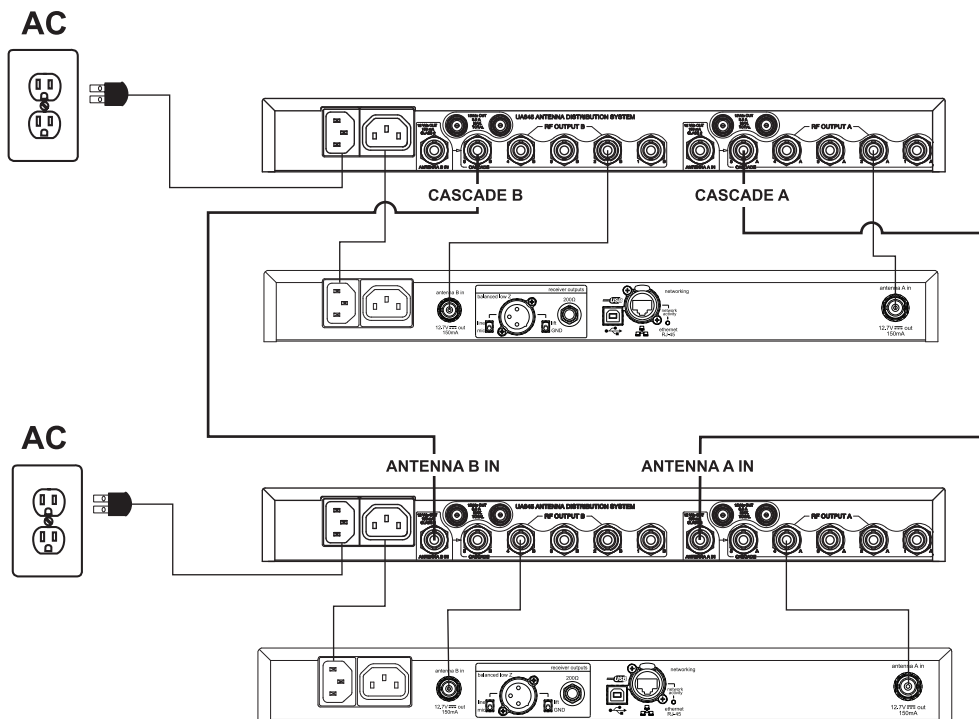

MULTIPLE UA845 SETUP

SPECIFICATIONS

UHF Carrier Frequency Range

UA845-SWB 470-952 MHz

Distributed Output Level (Gain)

3.5 dB typical, 2.0 dB to 5.0 dB from antenna input (Output ports 1-4).
0.5 dB typical, -1.0 dB to 2.0 dB from antenna input (Cascade port)

Models: UA845 US, UK, E:

3 dB typical, 0 dB to 3.5 dB from antenna input (Output ports 1-4)
1 dB typical, -1.6 dB to +1.8 dB from antenna input (Cascade port)

Output Connector Isolation

..... Greater than 25 dB

Third Order Intercept Point (3 OIP)

..... Typical 24 dBm

Input/Output AC Line Voltage

..... 100 to 240 Vac, 50/60 Hz, unswitched

DC Output Voltage

..... 12 Vdc, 4 connectors

Maximun Current Supply from DC Outputs

..... 1.1 Amps

Impedance

..... 50 Ω

Operating Temperature Range

..... -7° C (+20° F) to 49° C (+120° F)

Overall Dimensions

44.5 mm high x 482.6 mm wide x 295.3 mm deep (1 3/4 x 19 5/8 x 11 inches)

Net Weight

..... 3.32 Kg (7 lbs, 5 oz)

Input/Output Antenna Connector Type

..... BNC-type

AC Power Consumption

..... 15 W per unit typical.

Certification

UA845: LISTED by UL and CUL (U.S. and Canada), IC and FCC; IC Certified (Canada). Meets applicable European directives for CE marking eligibility. Meets Requirements of EMC Standard and 301 489 Parts 1 and 9. Meets the essential requirements of the European R&TTE Directive 99/5/EC and are eligible to carry the CE marking.

FURNISHED ACCESSORIES

2 ft. Coaxial Antenna Cable (RG-58) (12) UA802

OPTIONAL ACCESSORIES

1/2-Wave Antenna

UA820A 774-865 MHz

UA820B 690-746 MHz

UA820D 554-590 MHz

UA820G 470-530 MHz

UA820X 944-952 MHz

25 ft. Coaxial Cable (RG-8/X) UA825

50 ft. Coaxial Cable (RG-8/X) UA850

30.4 m (100 ft.) Antenna Extension Cable UA8100

In-Line RF Amplifier

UA830A 782-810 MHz

UA830C 800-830 MHz

UA830KK 838-862 MHz

UA830WB 470-900 MHz

UA830USTV 470-698 MHz

UA830X 944-952 MHz

Active Directional Antenna

UA870A 782-810 MHz

UA870MB 800-830 MHz

UA870KK 838-862 MHz

UA870WB 470-900 MHz

UA870USTV 470-698 MHz

UA870X 944-952 MHz

REPLACEMENT PARTS

Hardware Kit 90XN1371

Bulkhead Adapters 95A8994

120 VAC Power Line Cord 95B8389

230 VAC Power Line Cord 95C8247

240 VAC Power Line Cord (U.K.) 95A8713

120 VAC, 16-in. Power-Through Cord 95B8576

230 VAC, 18-in. Power-Through Cord 95B8678

THIS RADIO EQUIPMENT IS INTENDED FOR USE IN MUSICAL PROFESSIONAL ENTERTAINMENT AND SIMILAR APPLICATIONS.

NOTE: THIS RADIO APPARATUS MAY BE CAPABLE OF OPERATING ON SOME FREQUENCIES NOT AUTHORIZED IN YOUR REGION. PLEASE CONTACT YOUR NATIONAL AUTHORITY TO OBTAIN INFORMATION ON AUTHORIZED FREQUENCIES FOR WIRELESS MICROPHONE PRODUCTS IN YOUR REGION

LICENSING AND WARRANTY INFORMATION

Warranty. Shure Incorporated ("Shure") hereby warrants that these products will be free from defects in material and workmanship for a period of two years from the date of purchase. At its option, Shure will repair or replace the defective product and promptly return it to you, or refund the purchase price. Retain proof of purchase to validate the purchase date and return it with any warranty claim. If you believe this product is defective within the warranty period, carefully repack the unit, insure it, and return it postpaid to:

Shure Incorporated
Attention: Service Department
5800 W. Touhy Avenue
Niles, IL 60714-4608 U.S.A.

For service outside the United States, return the product to your authorized Shure Distribution Center.

All claims of defects or shortage should be directed to the above address. Please furnish model number, operating frequency, and date, place and proof of purchase (such as a copy of your sales receipt) to establish warranty. Your letter should include all pertinent details including applicable model or part numbers and a brief description of the problem. Do not mail any units or parts to Shure unless requested to do so by Shure's Service Department. Any returned items must have prior authorization. Unauthorized returns are delayed in handling; these delays can be avoided by contacting Shure in advance and furnishing the necessary information.

Shure reserves the right to make design changes and product improvements on any previously manufactured products. Shure also reserves the right to ship new and/or improved products which are similar to the form, fit and function of the originally ordered products.

Licensing. Changes or modifications not expressly approved by Shure Incorporated could void your authority to operate the equipment. Licensing of Shure wireless microphone equipment is the user's responsibility, and licensability depends on the user's classification and application, and on the selected frequency. Shure strongly urges the user to contact the appropriate telecommunications authority concerning proper licensing, and before choosing and ordering frequencies other than standard frequencies.

EU DECLARATION OF CONFORMITY

We,
of

Shure Incorporated
5800 Touhy Avenue
Niles, Illinois, 60714-4608 U.S.A.
Phone: (847) 600-2000
Web: www.Shure.com

Declare under our sole responsibility that the following product

Model: UA845SWB Description: Antenna Distribution Amplifier

conforms to the essential requirements of
European Low Voltage Directive 2006/95/EC
European EMC Directive 2004/108/EC

The product complies with the following product family, harmonized or national standards:


EN 301 489-9 V1.4.1 (2007-11)
EN61000-3-2:2006
EN 61000-3-3 Amendment: 1995, A1:2001, A2 2005
EN60065:2002

The technical documentation is kept at:
Shure Incorporated, Corporate Quality Engineering Division
SHURE Europe GmbH, EMEA Approval

Manufacturer: Shure Incorporated

Signed:  Date: 13 July 2009
Name and Title: Craig Kozokar, EMC Project Engineer, Corporate Quality Engineering Division

European Representative: SHURE Europe GmbH

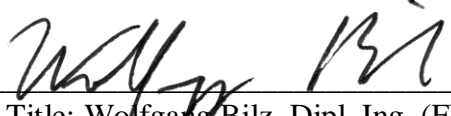Signed:  Date: 13 July 2009
Name and Title: Wolfgang Bilz, Dipl. Ing. (FH), EMEA Approval
SHURE Europe GmbH
Headquarters Europe, Middle East & Africa
Wannenäcker Str. 28
D-74078 Heilbronn, Germany
Phone: +49 - (0)7131 - 7214 - 0
Fax: +49 - (0)7131 - 7214 - 14



United States:
Shure Incorporated
5800 West Touhy Avenue
Niles, IL 60714-4608 USA

Phone: 847-600-2000
Fax: 847-600-1212
Email: info@shure.com

Europe, Middle East, Africa:
Shure Europe GmbH
Wannenäckestr. 28,
74078 Heilbronn, Germany

Phone: 49-7131-72140
Fax: 49-7131-721414
Email: info@shure.de

Asia, Pacific:
Shure Asia Limited
Unit 301, 3rd Floor
Citicorp Centre
18, Whitfield Road
Causeway Bay, Hong Kong

Phone: 852-2893-4290
Fax: 852-2893-4055
Email: info@shure.com.hk

**Canada, Latin America,
Caribbean:**
Shure Incorporated
5800 West Touhy Avenue
Niles, IL 60714-4608 USA

Phone: 847-600-2000
Fax: 847-600-6446
Email: international@shure.com